

## **Annex 1**


# **How to change the default 'send' SMS messages when using the M36 / DINBOX M36**

Date: 16 juin 2010

This document describes how to change the outgoing default SMS messages when using the M36 software application used by the DinBox M36 hardware (or any TC65i based hardware device)

The SMS messages send by the application always have a fixed part & a custom part. For some applications this can be a problem. If you like to send a complete custom SMS message (without the default settings) please use the following syntax when defining the custom message.

Configuring an input with the following settings:

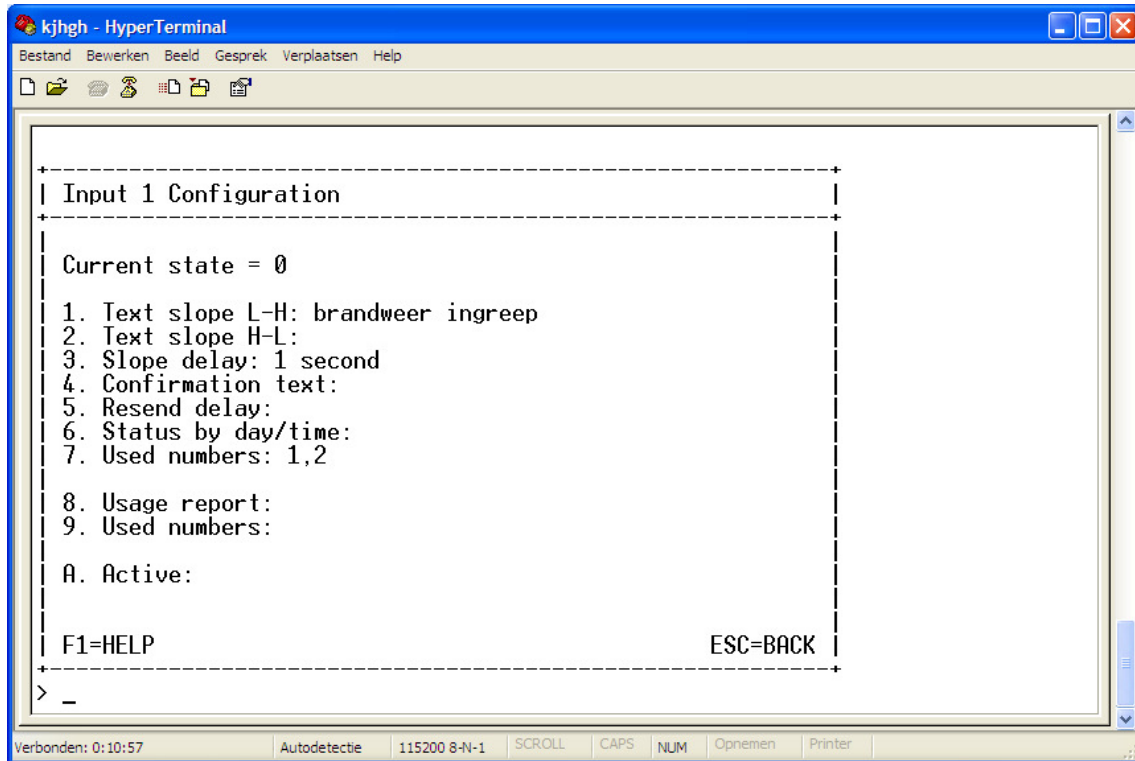

```
kjgh - HyperTerminal
Bestand  Bewerken  Beeld  Gesprek  Verplaatsen  Help

+-----+
| Input 1 Configuration |
+-----+

Current state = 0


1. Text slope L-H: brandweer ingreep
2. Text slope H-L:
3. Slope delay: 1 second
4. Confirmation text:
5. Resend delay:
6. Status by day/time:
7. Used numbers: 1,2

8. Usage report:
9. Used numbers:


A. Active:

F1=HELP                                ESC=BACK
+-----+
> _
```

Will send a SMS message:

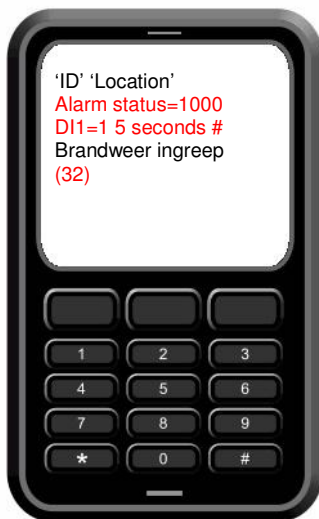

When the custom message is starting with xxx "your text here" the following message will be send (without the default parameters)

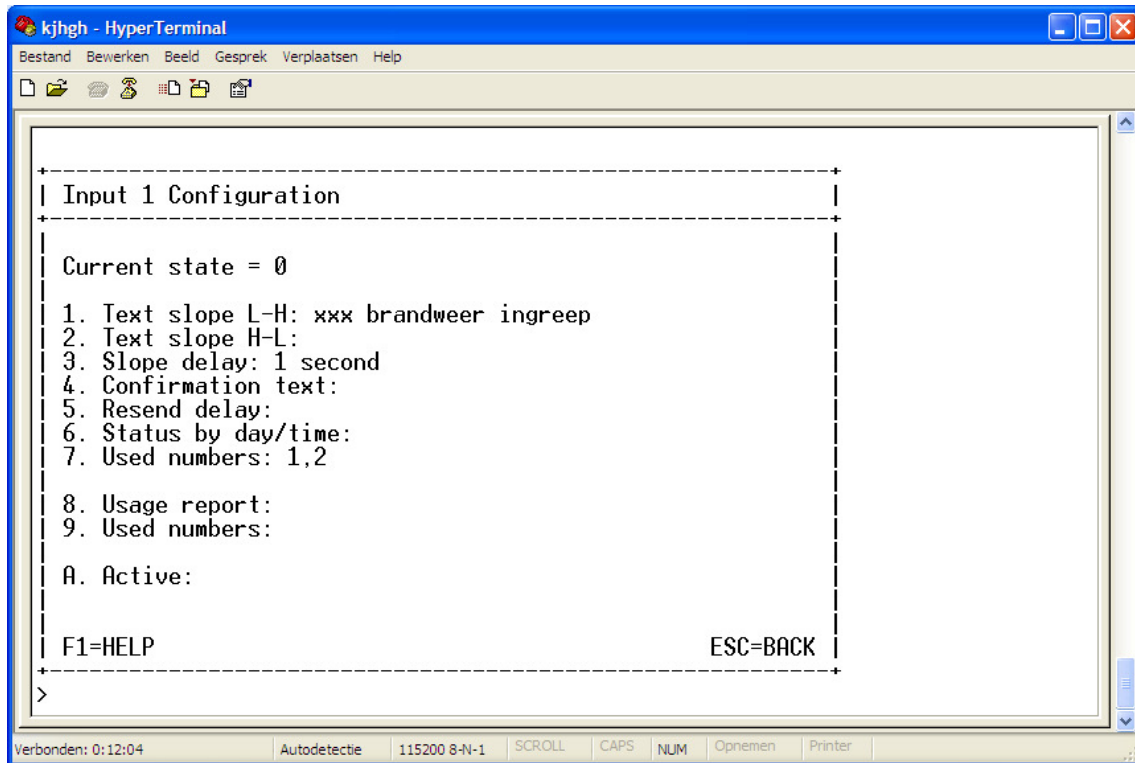

Will send the following message



**Bausch Datacom NV/SA contact information:**

**BAUSCH DATACOM NV Belgium**

Tiensesteenweg 54-56  
B- 3360 Korbeek-Lo  
Belgium

Phone: Int 32 (0)16 46 12 88

Fax: Int 32 (0)16 46 31 51

Info: [info@bausch.be](mailto:info@bausch.be)

Sales: [sales@bausch.be](mailto:sales@bausch.be)

Support: [support@bausch.be](mailto:support@bausch.be)

Website : [www.bauschdatacom.be](http://www.bauschdatacom.be)